 




Nikon Coolpix P100 Display Screen Replacement

This guide will help users replace specific components of the Nikon Coolpix P100.

Written By: Rikki Brown

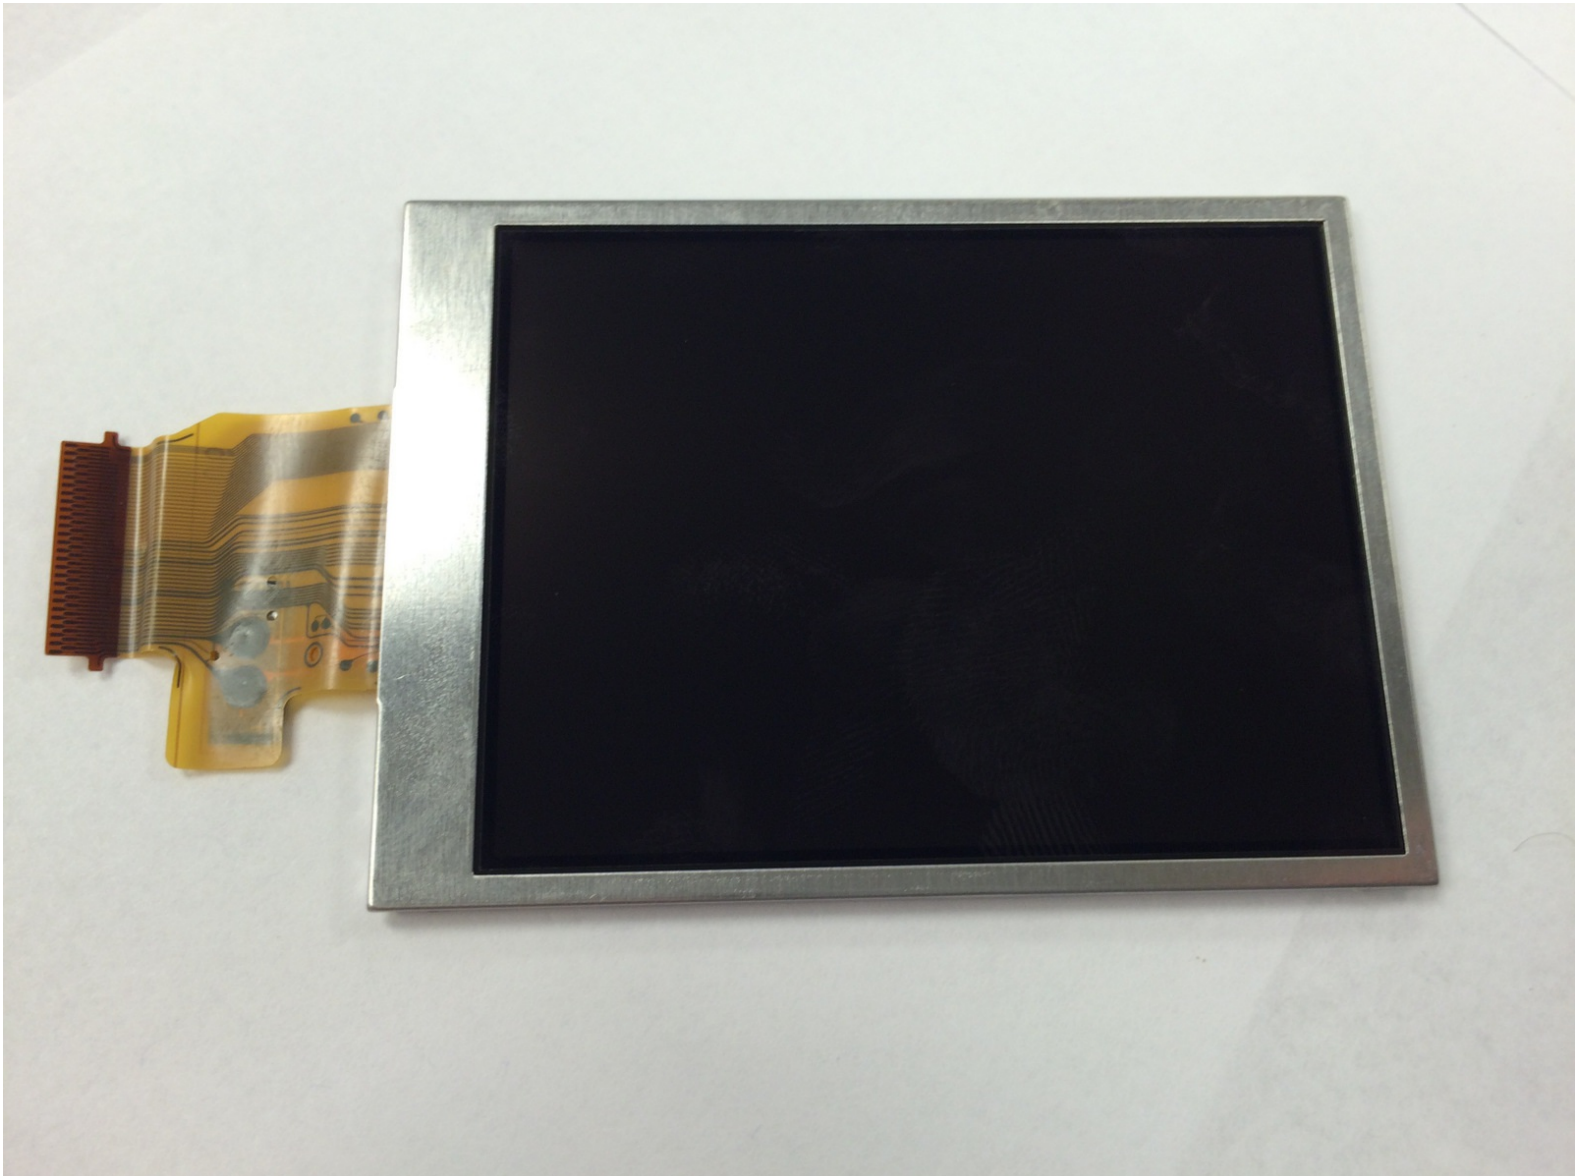



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Display Screen




- This is the Nikon Coolpix P100.

Step 2

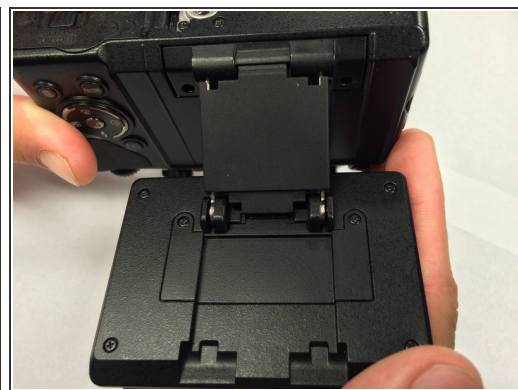


- Flip the camera over upside down.
- Pull back the display panel to reveal the back of the display panel.

Step 3

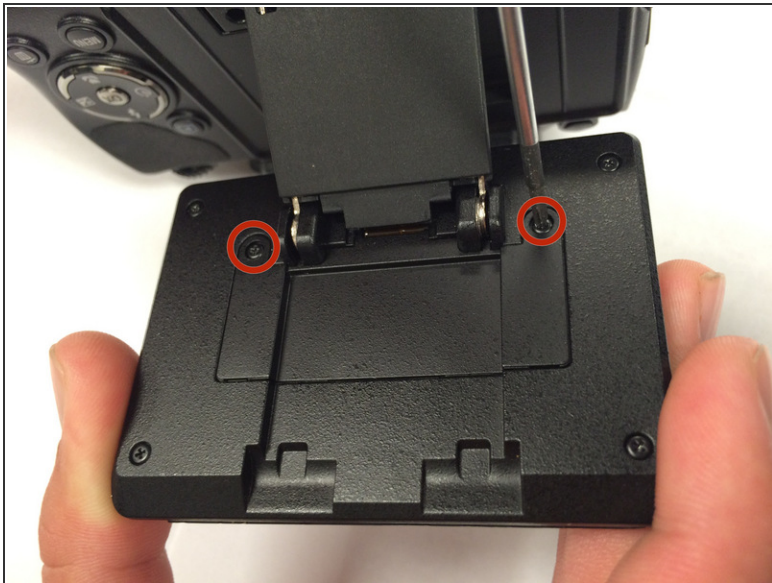


- Use a Phillips screwdriver to unscrew the two innermost screws.

Step 4

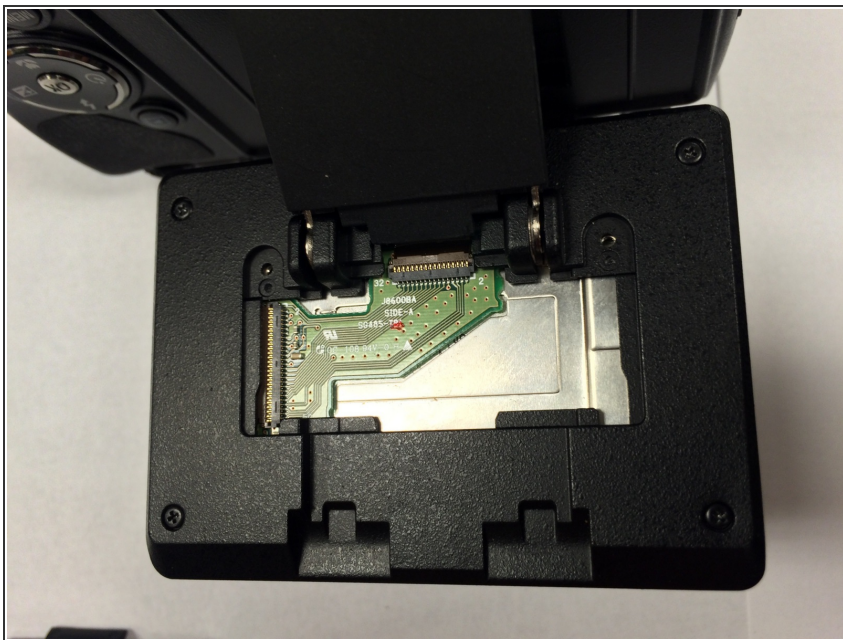




- Remove the back panel that you have just unscrewed.

Step 5

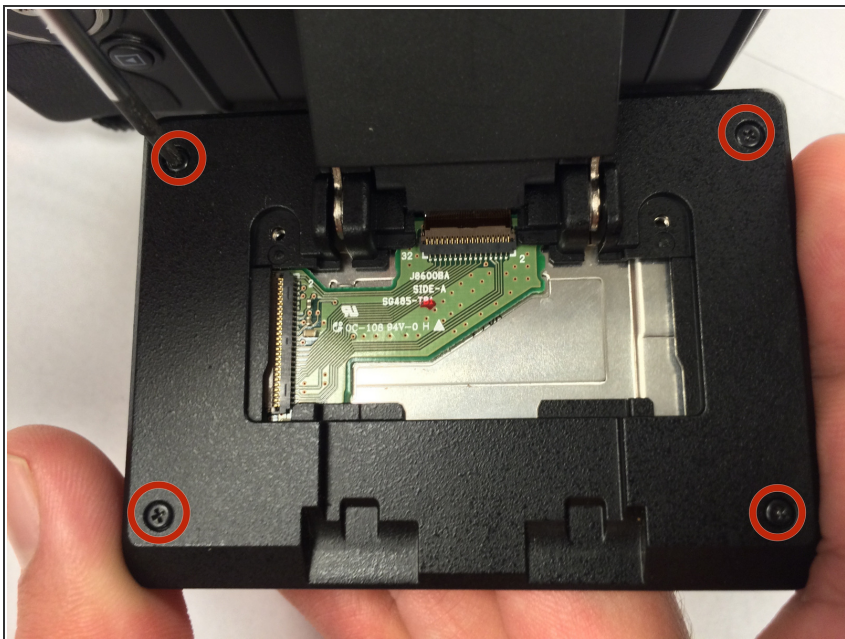




- Use a Phillips screwdriver to remove the remaining four screws on the outermost corners.

Step 6

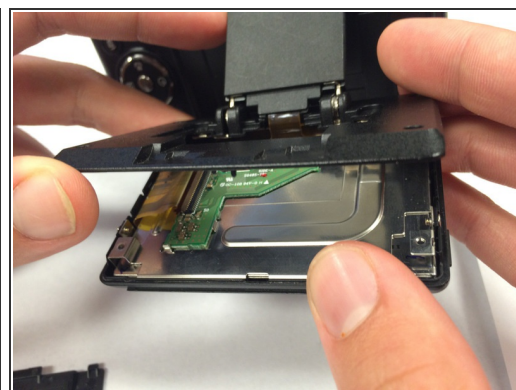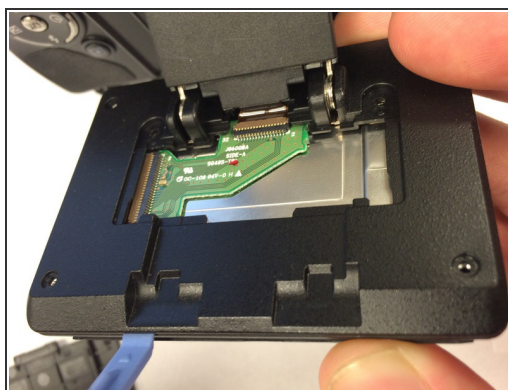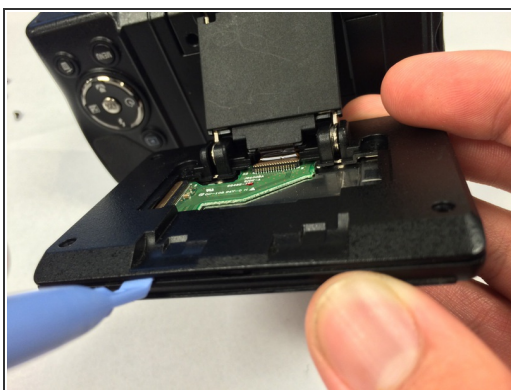


- Use a plastic opening tool to pry open the back panel of the display screen.

Step 7

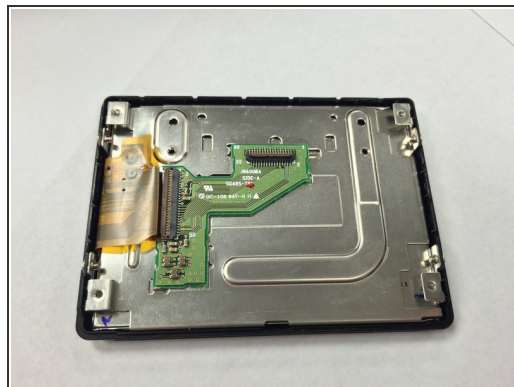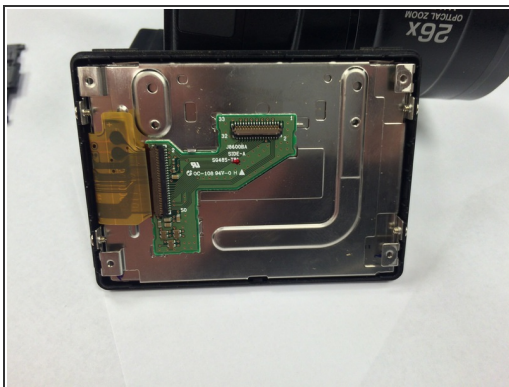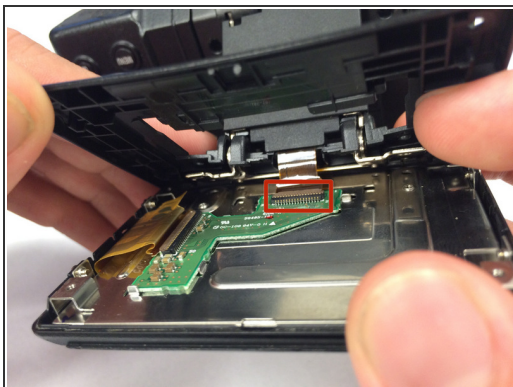


⚠ Carefully unhook the ribbon and remove the top black cover. [Disassembling Nikon Coolpix P100 Ribbon Cable](#)

Step 8

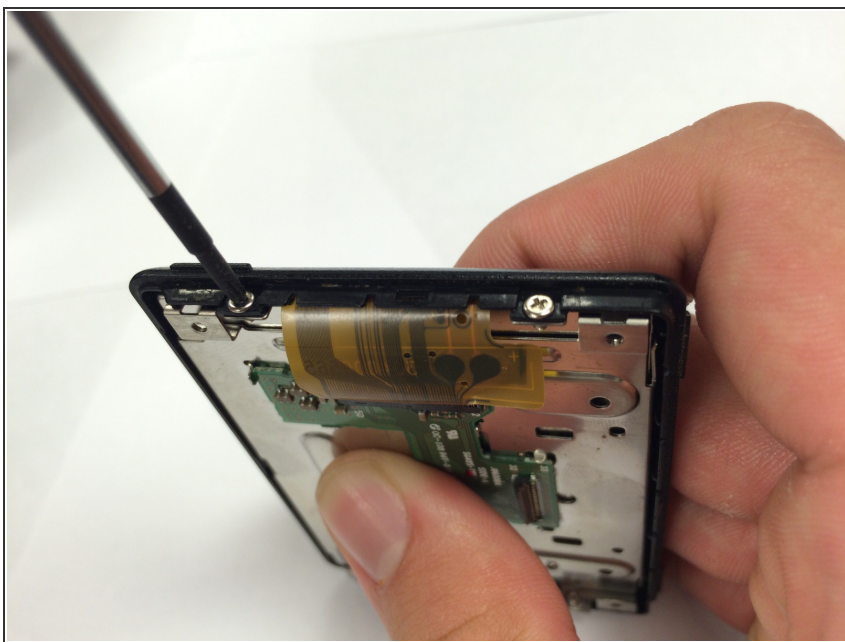

- Turn the piece sideways with the ribbon cable and remove the two screws shown.

Step 9

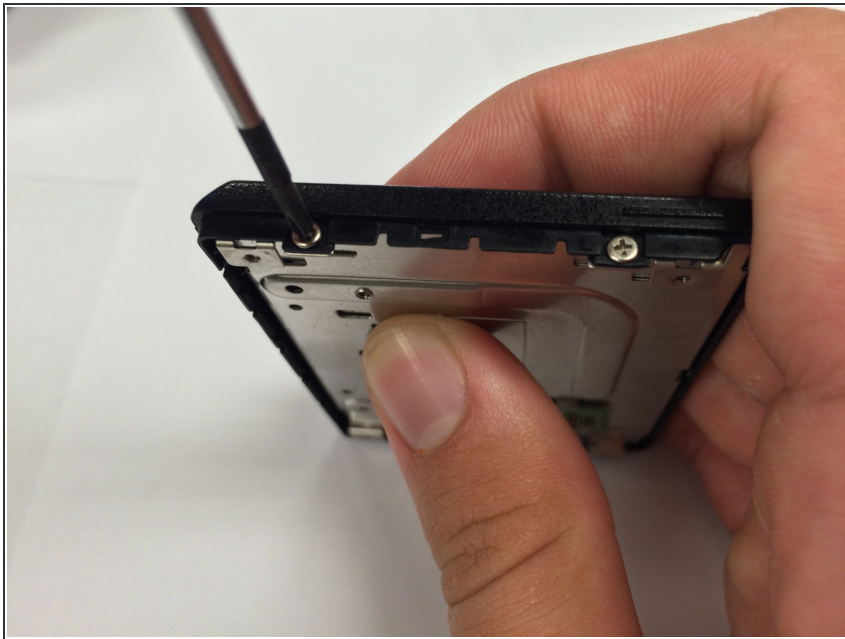


- Remove the other two screws on the opposite side of the panel.

Step 10




- Gently pull the display screen back from the screen protector.

Step 11

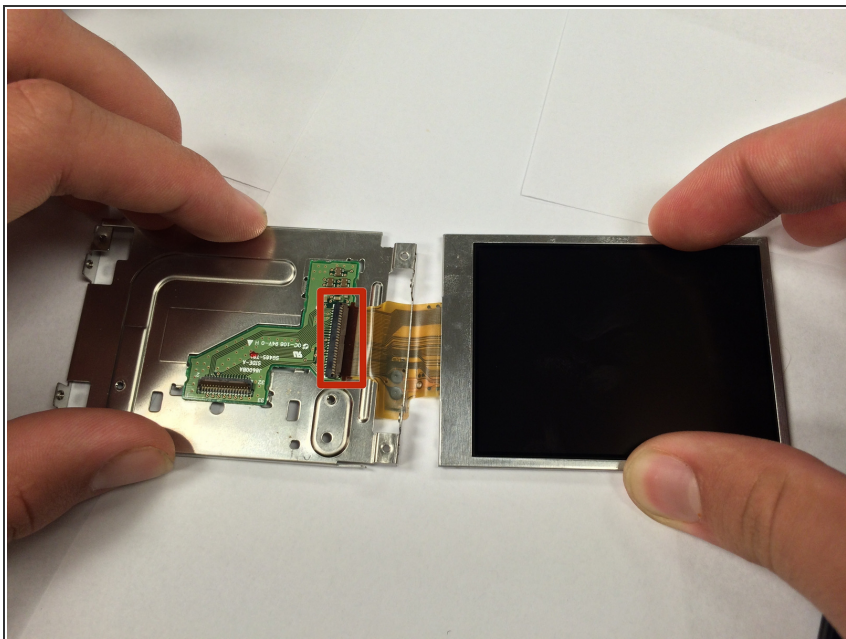

⚠ Carefully remove the ribbon connector cable.

Step 12

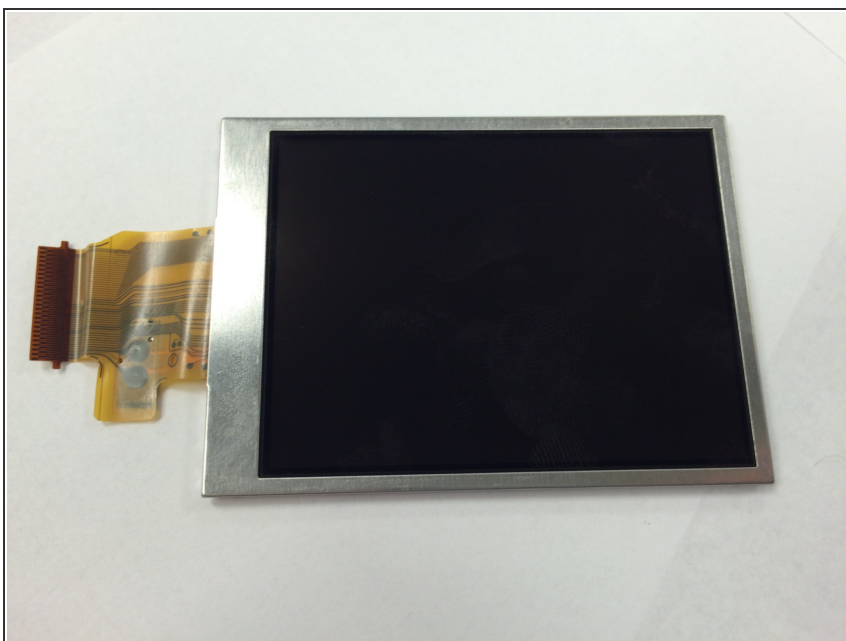

- Now you have successfully removed the display panel.

To reassemble your device, follow these instructions in reverse order.